

FITTING & TRIMMING INSTRUCTIONS

STEP 1

REMOVE

Take out the pre-existing insole or sockliner if there is one.



STEP 2

LINE UP

Facedown, place the pre-existing insole under your new insole.

A: Align the heel of the pre-existing insole and the new insole along the rear and tap.

B: Align the inside edges of the two insoles at the widest part of the forefoot and tap.




STEP 3

TRACE

Trace the pattern onto the new insole using a pen.

If there is no pre-existing insole, then trace the shoe's outsole.

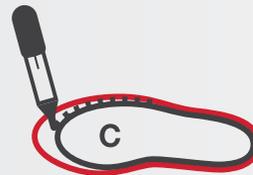

STEP 4

TRIM

Cut along the outside of the traced line, and then place the new insole in the shoe.

